

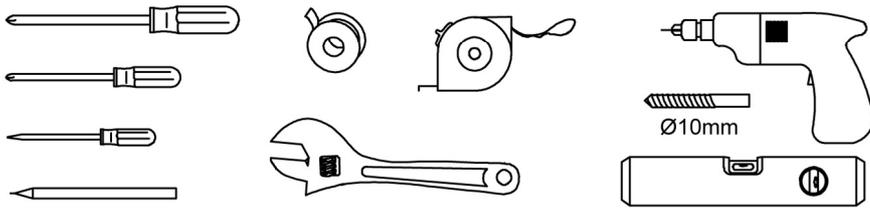
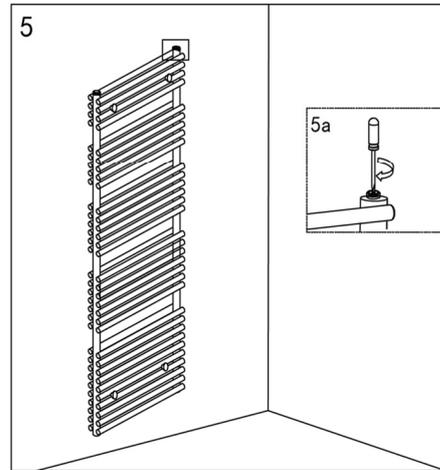
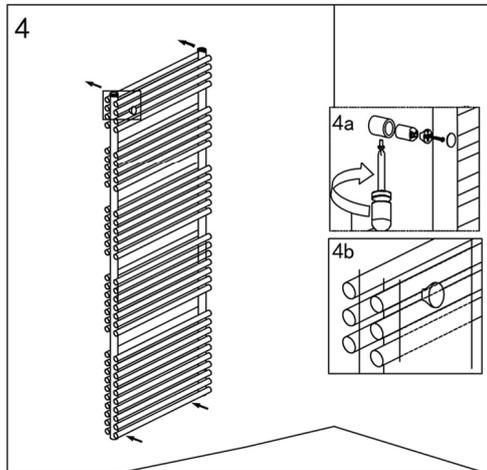
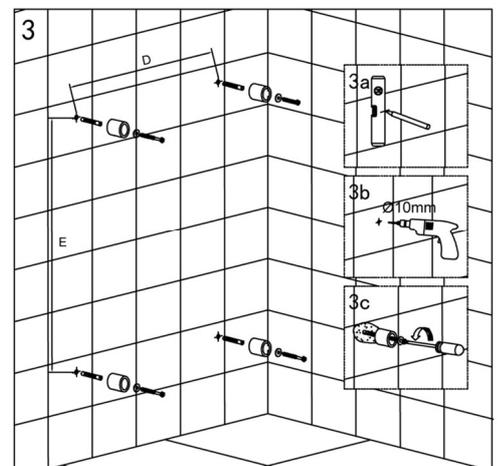
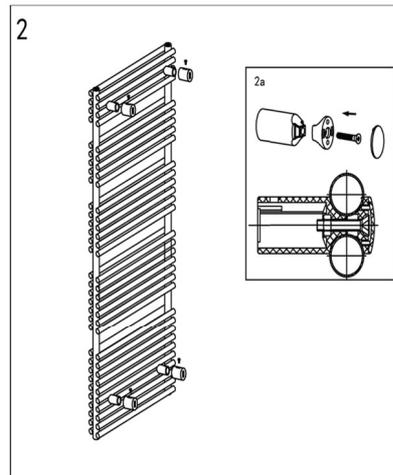


BIAVA DOUBLE TUBE ON TUBE Towel Rail Instruction Manual

tools required

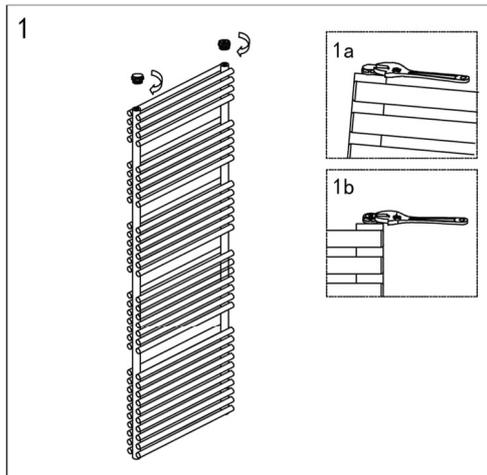

- review instructions carefully before installation
- installation should be completed by a qualified person
- please dispose of packaging in a responsible manner

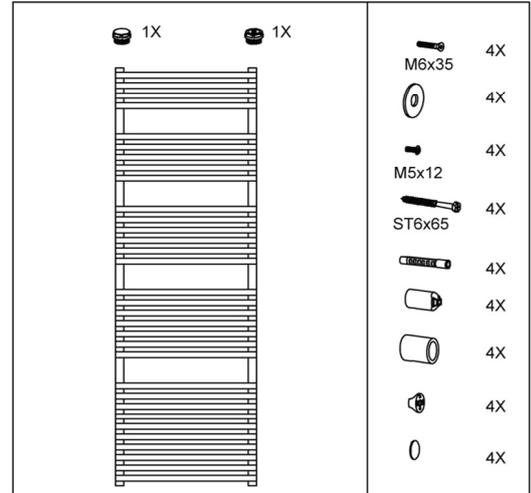

After installation ...

- . Use a screwdriver to open the air vent, open the inlet valve and let the water rush into the radiator.
- . Check all connections for leaks.
- . Once water overflows from the air vent, there is no air in the tube.
- . Use a screwdriver to close the air vent. Turn on the outlet valve and the radiator is ready for use.

Maintenance...

- The outside of the towel warmer can be cleaned using warm soapy water. Do not use scouring powders or acid based products as these could damage the finish.
- . It is recommended that the unit should be drained if not in use and ambient temperatures are below 0°C (32°F) to prevent damage from the filling freezing. To remove any oxidation.
- . If the water temperature in the system exceeds 50°C (122°F), please install a warning mark near the radiator to avoid being scalded.
- . If the product is not used for a prolonged period (for example spring, summer), ensure the radiator is kept filled containing a rust inhibitor to prevent oxidation on the inside of the unit.
- . This product should only be used with a maximum pressure of PN ≤ 1MPa (10Kg/CM², 10Bar).
- . Maximum temperature t ≤ 100°C (212°F).

5 years manufacturer's warranty*
with conditions

Eastbrook 
Eastbrook Road, Gloucester GL4 3DB
Technical Helpline : 01452 317890
Mon - Fri / 8am - 5pm
Email : technical@eastbrookco.com